


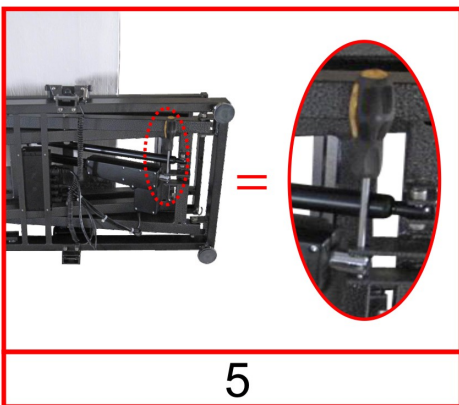
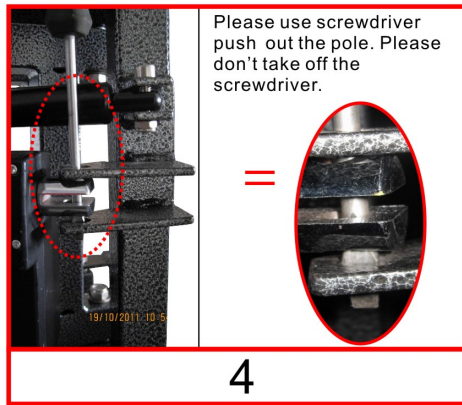
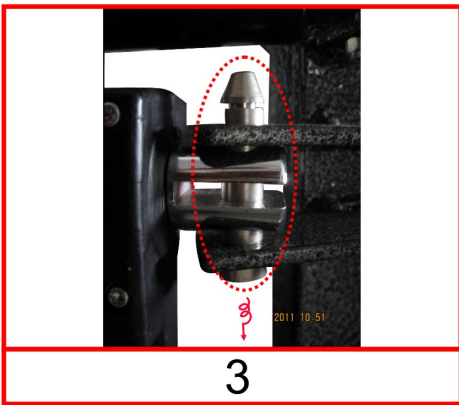
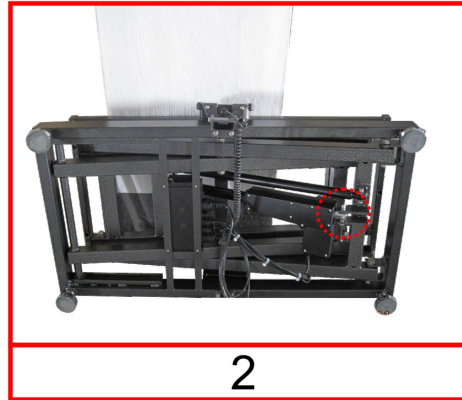
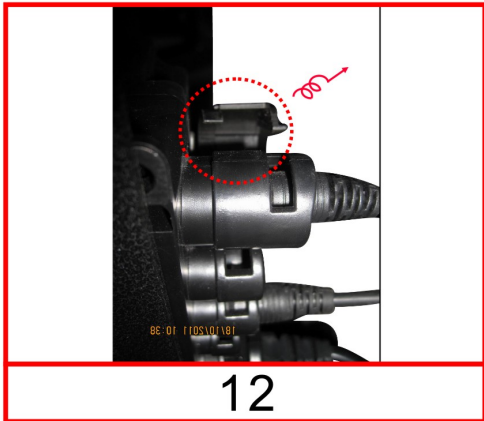
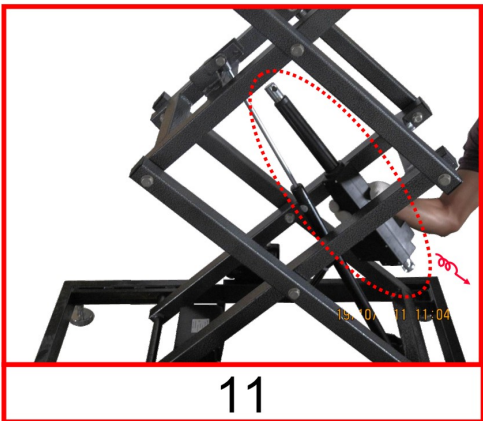


How to take off the motor of et-290.

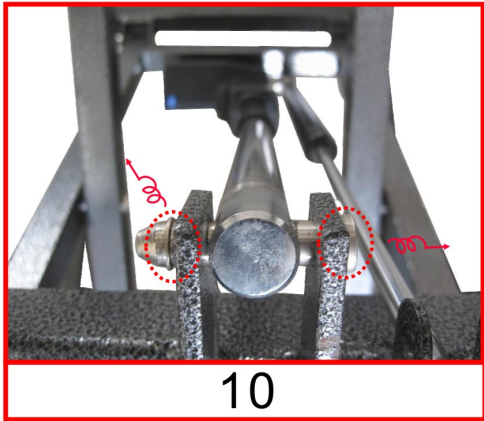

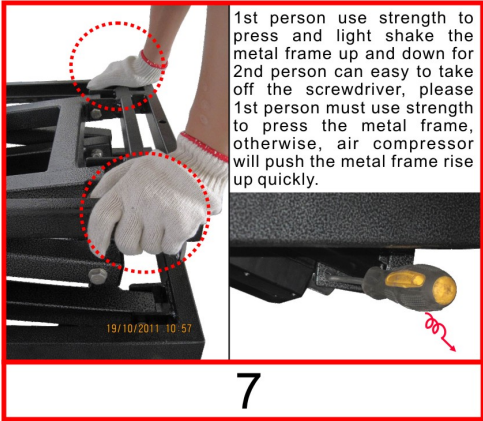

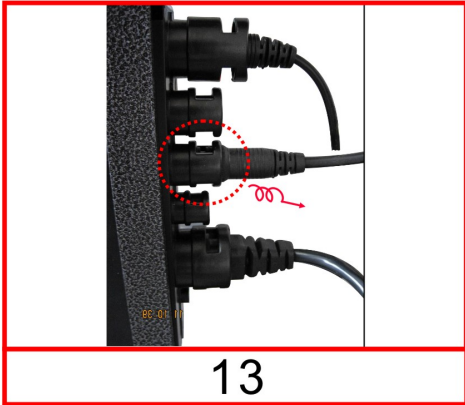

How to install the new motor:

