



Service Manual & Warranty Information

SAFE-T GRID™

Your Paw Brothers® Pro Hydraulic Grooming Table features a removable table top for easy cleaning and a “Z” shaped base that eliminates wobbling and tipping. The all metal frame is strong and long lasting. An antistatic baked epoxy finish adds style and durability. The removable top is made with Belgian poly-board covered by a premium non-slip rubber surface. The outstanding quality Italian style hydraulic pump mechanism allows the table to adjust from 19” to 40”, with a maximum lifting capacity of 200 lbs.

In the unlikely event your table should need repair the following replacement parts are available:

Hydraulic Pump

Leg Levelers

Grooming Arm


Removable & Reversible Safe-T Grid™ Table Top

Initial Inspection

When your Paw Brothers® Pro Hydraulic Grooming Table arrives, check immediately for signs of shipping damage. If you notice damage, save the shipping carton for claim purposes, and immediately report the problem to your supplier and to the shipping company. Also, save the carton for shipping in case your product ever needs repair at a remote location.

Tools Required for service: #2 Phillips Head Screwdriver
 Allen wrench
 Set of metric wrenches or sockets
 Pliers

Pro Hydraulic Grooming Table Service Instructions

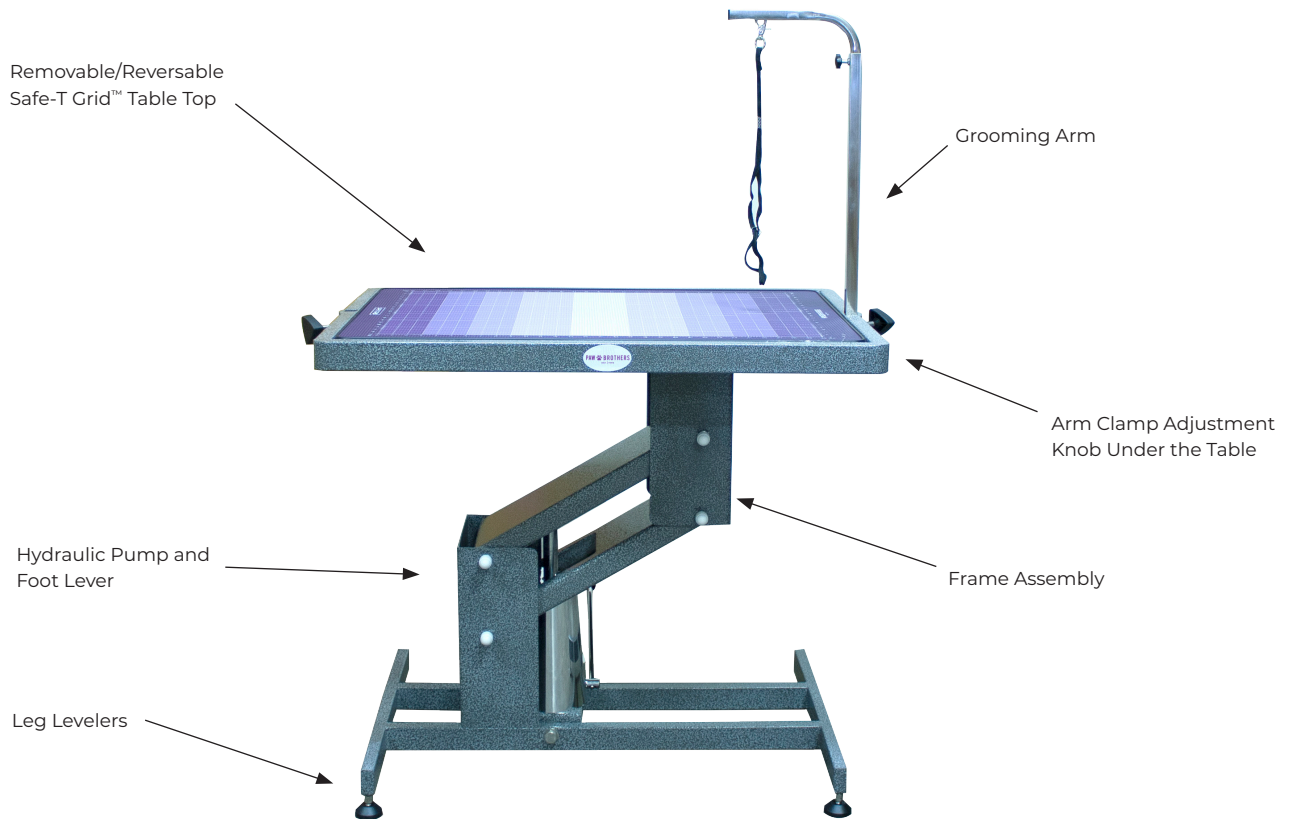

Caution: The hydraulic table is heavy. Two people are required for these procedures.

Hydraulic Pump Replacement

Step 1: Remove the table top from the frame assembly, and set it aside. Remove the grooming arm. Turn the entire frame assembly upside down and place it on a protective surface to avoid marring the epoxy finish.

Step 2: Using an Allen wrench, remove the foot lever by loosening the two set screws on either side of the hydraulic pump. Note the position of the foot lever and how it goes through the slot in the frame assembly.

Step 3: Remove the cotter pin and retaining bolt from the frame assembly. See Figure 1.



Figure 1



The cotter pin and retaining bolt hold the top portion of the hydraulic pump to the frame assembly.

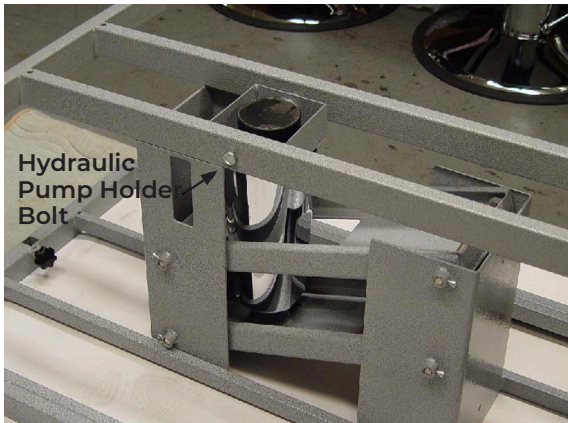


Figure 2

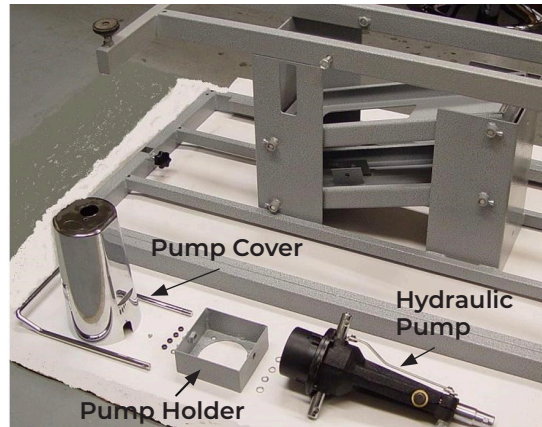


Figure 3

Step 4: Remove the two bolts from each side of the hydraulic pump holder. See Figure 2.

Step 5: Lift the hydraulic pump up and out of the frame assembly.

Step 6: Remove the screw holding the plastic cover for the hydraulic pump.

Step 7: Remove the four nuts and washers holding the hydraulic pump to the pump holder. Remove the lock washers located under the holder.

Step 8: Attach the pump holder to the new hydraulic pump, making sure the lock washers are installed under the holder. Put on the four washers and nuts. Tighten each nut. Re-install the pump cover.

Step 9: Place the hydraulic pump and holder into the frame assembly and re-install the two holder bolts. Note: Make sure the hydraulic pump is in the correct position for the foot lever to be attached.

Step 10: Re-install the cotter pin and the retaining pin. Turn the table upright, and install the foot lever. Tighten both set screws for the foot lever. Re-install the table top and the grooming arm.

Statement of Limited Warranty

Warranty Period

Your hydraulic table is warranted against manufacturing defects in materials and workmanship, to the original purchaser, after the date of purchase, for six months for parts only. During the warranty period components that do fail may be repaired or replaced at the discretion of G & G Distribution, Inc. Any warranty claims must be accompanied with a copy of the original purchase invoice. For warranty service call 1-800-525-7387.

Warranty Exclusions

This warranty does not cover failures or damages resulting from misuse, accidents, modifications, unsuitable physical or operating environments, acts of nature, transportation damages, or improper maintenance.

Limitation of Liability

Under no circumstances is the supplier liable for third party claims against you for damages, special, incidental, or indirect damages, or for any economic consequential damages, or lost profits, business revenue, goodwill or anticipated savings. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.